




SAVOY
HOUSE

ITEM NO: 3-4197-4

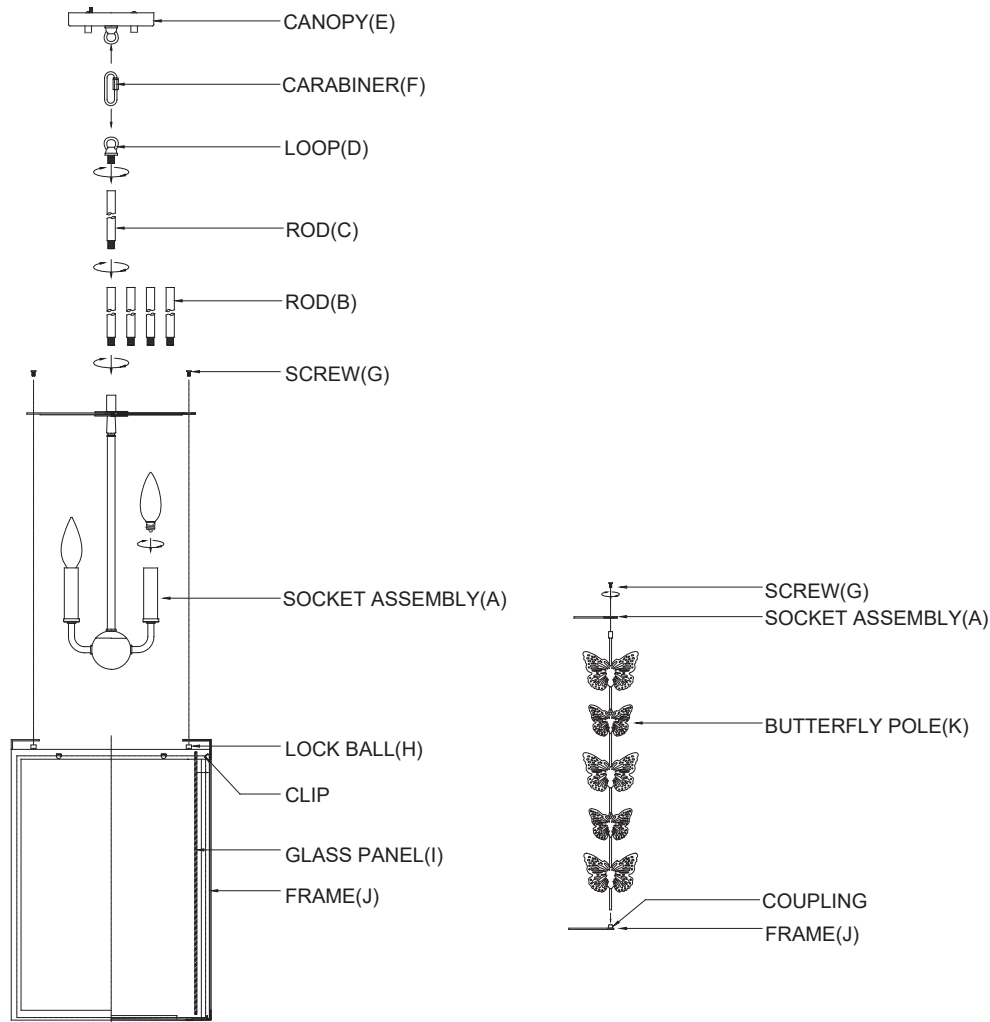

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Install the glass panels (I) onto the frame (J) and secure with clips.
4. Install the socket assembly (A) onto the frame (J) and secure it with screws (G) and lock balls (H).
5. Install the bottom of the butterfly pole (K) onto the coupling of the frame (J). With the butterfly poles (K) facing inward. Fix the top of the butterfly pole (K) to the socket assembly (A) with screws (G).
6. Unravel the supply power and ground wires and pass them through the center holes of rods (B), rod (C), loop (D) and canopy (E).
7. Thread the bottom of rods (B) to the socket assembly (A). Repeat process for remaining rod (C). Hand tighten until snug. Install the loop (D) into the top of rod (C).
8. Use the carabiner (F) to connect the loop (D) to the loop on the canopy (E) and twist the locking mechanism to secure.
9. Refer to the additional installation instructions included with the product for wiring and installation.
10. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
11. Restore power to the installation point and retain this sheet for future reference.